 





user's manual

Air Fryer

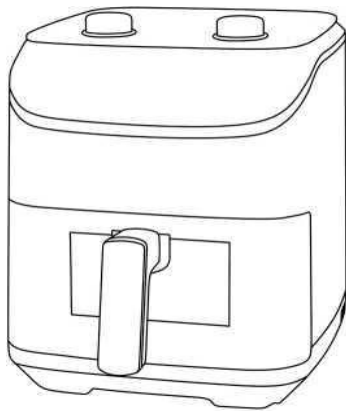

 
Mechanical
(DK-004)

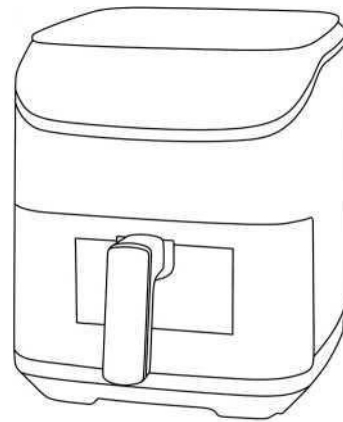

Electronic
(DK-005)

* Cannot operate with external timer or independent remote control system

一、Main product structure

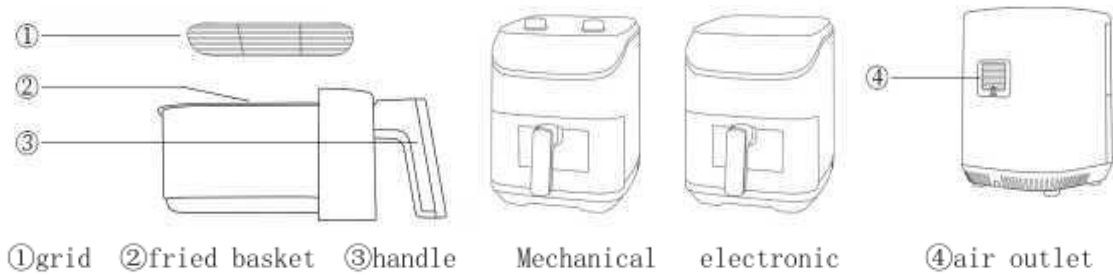

The food contact materials and components of this product comply with the requirements of GB4706.L2005 and the corresponding national food safety standards. The specific information is as follows:

| food contact materials | Material (grade/ingredient) | Executive standard |
|------------------------|-----------------------------|--------------------|
| Baskets, wire racks | Teflon coating | GB4806.10-2016 |
| | Base material: metal iron | GB4806.9-2016 |

Note: This series of products contains the above food contact materials, and some models may not contain individual materials, please refer to the actual product! The numbers in this logo indicate that the environmental service life of the product under normal use is 15 years

| Part Name | harmful materials | | | | | |
|----------------|-------------------|---------|--------------|---------------|-------------------------------|--------------------------------------|
| | lead (PB) | HG (Hg) | cadmium (Cd) | Ming (Cr(VI)) | polybrominated diphenyl (PBB) | polybrominated diphenyl ester (PBDE) |
| PCB board | 0 | 0 | 0 | 0 | 0 | 0 |
| Components | X | 0 | 0 | 0 | 0 | 0 |
| hardware board | 0 | 0 | 0 | 0 | 0 | 0 |
| plastic parts | 0 | 0 | 0 | 0 | 0 | 0 |
| wire | X | 0 | 0 | 0 | 0 | 0 |
| solder | X | 0 | 0 | 0 | 0 | 0 |

This form is prepared in accordance with the provisions of SJ/T11364.

•: Indicates that the content of this hazardous substance in all homogeneous materials of this part is below the limit requirement specified in GB/T26572. X: Indicates that the content of the

hazardous substance in at least one homogeneous material of the part exceeds the limit specified in GB/T26572 o

二、 Product introduction

Thank you for purchasing our company's products: multi-function air fryer, which integrates microwave ovens, electric ovens, frying pans, electric grills, toasters and other multi-functional air fryers to meet the needs of no cooking and cook all kinds of delicacies. Non-stick mesh rack in the pot, easy to clean, oil-free frying, healthy and environmentally friendly, allowing consumers to use it with confidence.

三、 Product parameters

technical parameter

| | | | |
|-------------|----------|-----------|---------|
| Voltage | 220-240V | frequency | 50-60Hz |
| rated power | 1800W | | |

Packing List

| | | | |
|------------|---|-------|---|
| fryer host | 1 | fryer | 1 |
| manual | 1 | grid | 1 |

四、 How to use

1. Preparation before use

- Remove all packaging materials.
- Take out the frying basket, wire rack, and remove the bubble bag. Use warm water to clean the frying basket and wire rack, wipe the side walls and bottom of the electric oven with a damp cloth soaked in detergent, and let it dry completely] before use.
- To place the air fryer on a stable surface, use a separate power cord.
- Enough space should be reserved around the air fryer to ensure that the surface is at least 10CM away from other items, and no items can be placed on the air outlet.

2. Pay attention

When using the air fryer for the first time, it is necessary to preheat the air fryer for 5 minutes to remove the residual oil

fumes. The first time you use it may smell peculiar smell, which is a normal phenomenon and not a malfunction of the air fryer.

3. Description

- Put food in the basket.

According to the height of the food, put it in the frying basket reasonably, and ensure that the food does not exceed the height of the frying basket wall as much as possible.

- Push the basket into the air fryer and adjust your desired heating temperature and time according to recipe or personal preference.

4. Use steps (electronic version)

- Plug in the power and press the start button to enter the selection state.

Temperature setting: Select the temperature start button, enter the temperature setting, select \oplus or \ominus to adjust the temperature, the range is $80^{\circ}\text{C}\sim 200^{\circ}\text{C}$

- Time setting: Select the time start key to enter the time setting, select the \oplus key or the \ominus key to set the time, the range is $0\sim 60$ minutes. Finally, select the start button, and the machine starts to work.

- Wait for the machine to run to the set time, and open the frying basket to observe the food condition in the middle.

When the set time is reached, the machine will automatically stop running, just open the frying basket and put the food on the plate.

5. Use steps (machine dolphin)

- Push the basket into the air fryer and adjust your desired heating temperature and time according to recipe or personal preference.

| | Minimum, ingredient amount (g) | time (minute) | flip | Additional Information |
|--------------------------------|--------------------------------|---------------|------|---------------------------|
| Potatoes and French Fries | | | | |
| Frozen Thin French Fries | 300-700 | 12-16 | flip | |
| frozen thick fries | 300-700 | 20-25 | flip | |
| Homemade French Fries 8x8mm | 300-800 | 18-25 | flip | Add 1/2 tablespoon of oil |
| Homemade Potato Chips | 300-800 | 12-25 | flip | Add 1/2 tablespoon of oil |
| Potato cake | 250 | 15-18 | | |
| Creamed Potatoes | 500 | 18-22 | | |
| meat and poultry | | | | |
| | 100-500 | 10-15 | | |
| pork chop | 100-500 | 10-14 | | |
| hamburger | 100-500 | 7-14 | | |
| sausage roll | 100-500 | 13-15 | | |
| drumstick | 100-500 | 18-22 | | |
| chicken breast | 100-500 | 15-22 | | |
| point seven' | | | | |
| spring rolls | 100-400 | 8-10 | flip | use ready-to-bake |
| frozen chicken nuggets | 100-500 | 15-20 | flip | use ready-to-bake |
| frozen fish nuggets | 100-400 | 30-35 | | use ready-to-bake |
| Frozen Bread and Cheese Treats | 100-400 | 8-10 | | use ready-to-bake |
| asparagus | 100-400 | 15-20 | | |
| | | | | |
| cake | 300 | 20-25 | | use ready-to-bake |
| cheese | 400 | 18-22 | | use ready-to-bake |
| muffin | 300 | 18-22 | | use ready-to-bake |

| | | | | |
|---------|-----|-------|--|-------------------|
| dessert | 400 | 18-22 | | use ready-to-bake |
|---------|-----|-------|--|-------------------|

五、 safety precautions

- Do not leave the product to work unattended to prevent dangers such as fire from burning ingredients.
- Make sure the accessories are dry before starting to use.

When using the product, there should be enough space around it, and at least 10CM away from the surrounding objects, to prevent the fumes from polluting the furniture and even causing fire and other dangers.

- This product should not be fired for a long time (without any ingredients). It is recommended not to use it continuously for more than 2 hours to prevent accidental injury and property damage caused by spontaneous combustion. Make sure that the food does not touch the heating tube during use. Please do not bake oversized food, otherwise it will cause smoke and fire.

- It is strictly forbidden to heat flammable materials such as plastics in the air fryer.

To avoid a fire or explosion hazard.

- Do not heat explosive items such as glassware and airtight containers that are not resistant to high temperature in the air fryer to avoid the risk of explosion.
- During use, please do not put bagged, canned or bottled items, cotton gauze or flammable materials on or cover the air fryer to avoid fire and explosion.
- Do not operate the product with an external timer or an independent remote control system to avoid dangers such as short circuit and spontaneous combustion.

The product will generate high temperature and steam during operation, do not touch it with your hands or bring your face close, especially when pulling out the fryer, be very careful, there may be hot steam coming out of the air fryer to prevent burns.

- When unplugging, be sure to hold the plug and pull out, do not yank or twist the power cord,

In order to prevent the power cord from being damaged, there is a danger of product leakage. Please use heat-insulating objects to take high-temperature items to prevent burns.

After use, please cut off the power supply, and clean the cavity after the product has cooled to prevent the residual powder residue, oil stains, etc. from smoking or catching fire during the baking process.

- If the power cord is damaged, in order to avoid danger, it must be Replacement by professionals in its maintenance department or similar department.

•If the product fails or is damaged, please stop using it, and you can contact our company's after-sales service point for maintenance. Do not repair it yourself to avoid danger.

WARNING: Be alert to risks that could result in danger to persons, serious injury, and substantial property damage.

Warning: During work, please use the knob or handle, and it is strictly forbidden to touch the high temperature surface and interior of the product to avoid burns. CAUTION: Be aware of the risk of possible personal injury or property damage.

This product is prohibited for use by children or persons with reduced physical, sensory or mental abilities. Unless they are supervised and instructed by those responsible for their safety regarding the use of the product. Children should be supervised to ensure that they do not play with this product.

This product is for home use only. The company is not responsible for any failures caused by commercial use, inappropriate use or failure to comply with this manual, and such failures and damages are not covered by the warranty.

Use of the product for any purpose other than food heating is strictly prohibited.

- After opening the package, please put the plastic bag into the trash can immediately to prevent children from playing and causing a suffocation hazard.
- All packaging materials must be removed when using, otherwise the product may cause fire, burns etc.
- Make sure the power cord does not come into contact with sharp edges, burrs, other protruding sharp objects, or objects with hot surfaces to prevent electric shock or fire from leakage.
- Before connecting the power supply, please check whether the voltage marked on the product is consistent with the power supply voltage to avoid damage to components or fire.

A grounded socket of 10A or above must be used alone, and the plug must be inserted into the socket completely to prevent damage to components due to poor contact, resulting in dangers such as short circuits.


- Please operate on the surface of the water platform, do not operate the product on flammable materials such as carpets, towels, plastics, paper, etc., to prevent fire.

Do not use this product on a surface that is unstable, humid, high temperature, smooth or not heat resistant.

To avoid electric shock, fire, slip and other thieves injury accidents and property damage.

- Please do not use this product in an environment with gas leakage and electric leakage, otherwise it will cause fire and electric shock.
- Do not use this product under or near combustible materials such as curtains, closets, etc. to prevent fires.

六、Electrical schematic

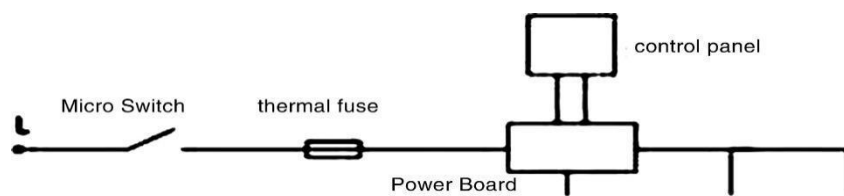

七、After-sales service

1. This product is guaranteed for one year from the date of purchase (with the company's accompanying manual), only for household use.
2. Within one year, under normal use, if the product itself has material process problems and functional failures, the company will provide free repair and replacement parts services for the warranty products.

Free maintenance service will not be provided in the following cases:

1. The product is damaged due to wrong installation and operation;
2. Non-company technicians repair, alter, and refit, and the user replaces any parts in the machine and causes damage;
3. The product is damaged by collision due to negligence;
4. Failure and damage caused by accidents and natural disasters.

Products beyond the free warranty period and not within the free warranty period regulations. The company can also provide maintenance services, but we will charge the maintenance fees for accessories as appropriate, please understand.

| | |
|-----------------------------|-----------------------|
| warranty card | |
| product name: Year | Month Day |
| Date of : manufacture: Year | Month Day |
| Invoice number: | |
| Purchase Date: Year | Month Day |
| Purchaser's name: | Telephone: |
| address: | post code: |
| Store name: | Store stamp: |
| address: | Postcode: Phone: |

Telephone: 0579-89093198