



HOW TO USE



Please read these Instructions carefully before use and keep them handy for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions before use.**
- Do not touch hot surfaces. Use handles or knobs.
- **WARNING** – to protect against electric shock, fire and personal injury :
 - do not immerse cord or plug in water or other liquids;
 - do not immerse the appliance or any electrical components in water or any other liquids;
 - always switch off and unplug the appliance before cleaning;
 - cook only in the provided basket placed in the Basket Holder.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children
- Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before leaning the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- To turn off and disconnect, press the **ON/OFF** button, then remove plug.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Never pull on the cord to disconnect the appliance from the wall outlet; instead, grasp the plug and pull on the plug.
- **CAUTION** – Risk of electric shock. Cook only in removable container.
- Oversized foods or metal utensils must not be inserted in the appliances as they may create a fire or risk of electric shock.
- Do not use appliance for other than intended use.
- Never leave the appliance unattended during operation.
- During use and when removing the basket, hot steam is released. Keep hands and face clear.
- Ensure a minimum distance around the appliance of at least 15cm to other objects,

cupboards and walls.

- A fire may occur if the appliance is covered or touches flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Use extreme caution when removing the basket, the Basket Holder or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials other than manufacturer's recommended accessories, in this appliance when not in use.
- Do not place any of the following materials in the appliance: paper, cardboard, plastic.
- Do not cover the basket or any part of the appliance with metal foil. This will cause overheating of the appliance.
- Let the appliance cool completely before putting away or storing.

ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

WARNING:


- **DO NOT OPERATE THIS APPLIANCE, IF THE POWER CORD SHOWS DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

ELECTROMAGNETIC FIELDS (EMF)

This appliance complies with all requirements relating to electromagnetic fields (EMF).

SAVE THESE INSTRUCTIONS

PRODUCT DESCRIPTION

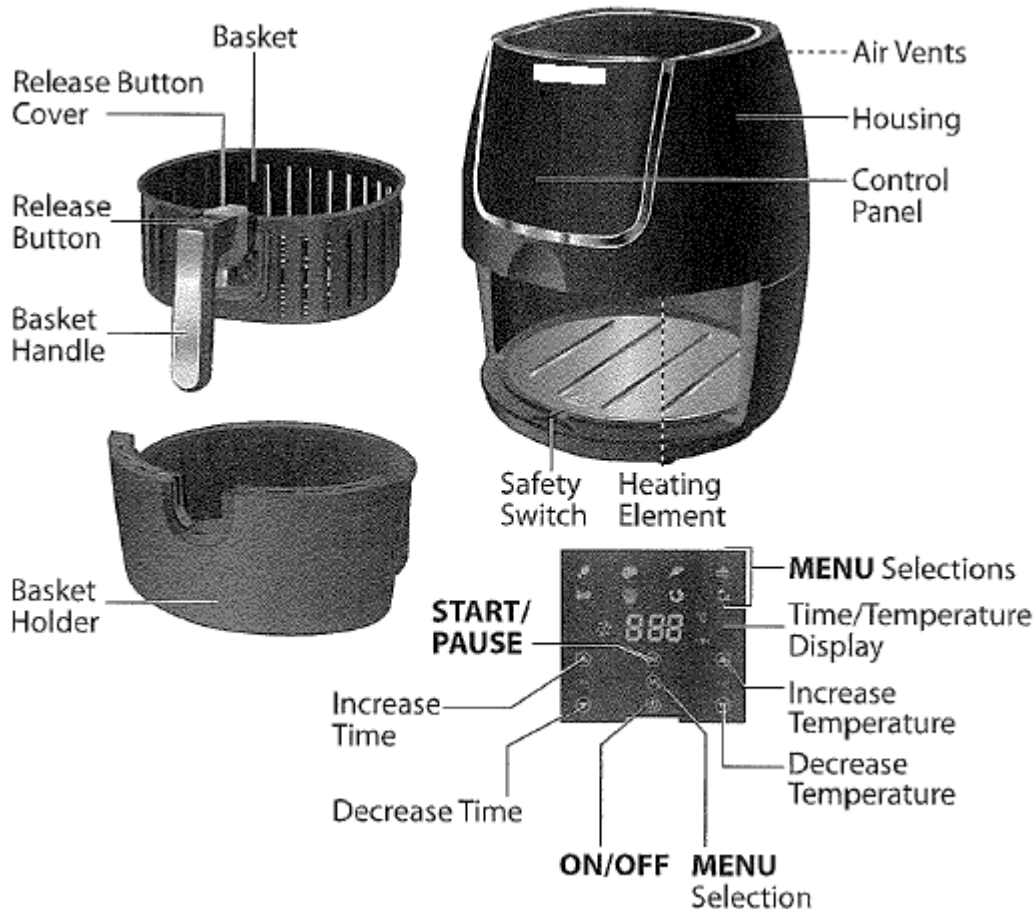

KNOW YOUR DIGITAL AIR FRYER

Prepare our favorite foods and snacks in a quick, healthy, and easy way with your new. This Air Fryer combines heat with high-speed air circulation to cook your ingredients from all sides, simultaneously! It also allows you to prepare a variety of tasty dishes without the addition of excess oils or fats to most ingredients. This Air Fryer features:

- Digital control of the cooking time and temperature.
- A digital Control Panel with 8 present menu options.
- A temperature control range up to 200°C
- A timer range from 1 to 60 minutes, which is equipped with an auto shut-off feature. Once the timer reaches “0”, the appliance will turn itself off.

Other great advantages provided by your Air Fryer include:

- Fast cooking, with little to no preheating required.
- Quick and easy clean-up: the non-stick coated parts are conveniently sized to fit in the dishwasher.
- Hassle-free frying – no splatters, no mess, and no oil smell!
- Versatility – with its frying, baking, grilling, and roasting capacities, this unit serves as a great cooking tool for a busy kitchen.
- No assembly required – very easy and safe to use!

Important: For golden, crispier results, similar to those obtained in a deep fryer, it is important to remember that leaner foods (fries, vegetables, chicken, fish, etc.) are best coated with just a tablespoon of oil. Simply add the ingredients in a bowl, add a tablespoon of oil, and toss until well coated.

You can also air-fry any food designed for being baked in the oven. The cooking times will likely need to be adjusted, because the Air Fryer will bake food much faster than a traditional oven or toaster oven.

OPERATION

Before first use

- Remove all packaging materials, labels and/or other transportation means.
- Check package content to verify it is complete and undamaged. Do not operate the appliance if the content is incomplete or appears damaged.

Danger of suffocation!

- Packaging materials are not toys. Always keep plastic bags, foils and foam parts away from babies and children. Packaging material could block airways and prevent breathing.

NOTE:

- Always use the appliance with the Basket placed securely in the Basket Holder.
- The appliance may produce an odor and emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.
- It is recommended to operate it for at least 20 minutes on its highest setting (see “Using the appliance”), until no odor or smoke is present. During use, ensure ample ventilation.
- Let the appliance cool completely.
- Clean the appliance (see “Cleaning and Maintenance”).

RESERVE BUTTON

Keeps food warm for the set time



TURN OFF

Long press for 3 seconds to turn off

